

StoneL AS-Interface “96” series VCT Emerson DeltaV: Device Setup in AS-Interface Library

1. Select Name and Description for the New Profile

StoneL_96_VCT Properties

General Profile Inputs Outputs Parameters

Object type: ASIDeviceType
Modified: Feb 12 2004 09:44:34 AM
Modified by: ADMINISTRATOR

Name:
StoneL_96_VCT

Description:
StoneL_96_VCT

OK Cancel Apply Help

2. Set Profile of StoneL VCT

StoneL_96_VCT Properties

General Profile Inputs Outputs Parameters

Profile:
S-4.F

I/O Configuration:
8x4 IN IN I/O I/O

Identification Code:
0xF

OK Cancel Apply Help

3. Set Input Bit details.
(check all 4)

StoneL_96_VCT Properties

General Profile Inputs Outputs Parameters

Label

I1
 aux_in1

I2
 aux_in2

I3
 open

I4
 closed

OK Cancel Apply Help

4. Set Output Bit details.

StoneL_96_VCT Properties

General Profile Inputs Outputs Parameters

Label

O1

O2

O3
 out1

O4
 out2

OK Cancel Apply Help

5. Set Parameter bits
(None checked)

StoneL_96_VCT Properties

General Profile Inputs Outputs Parameters

Label

P0

P1

P2

P3

OK Cancel Apply Help