

Jamesbury™ valves for chlorine service

Installation, maintenance and
operating instructions

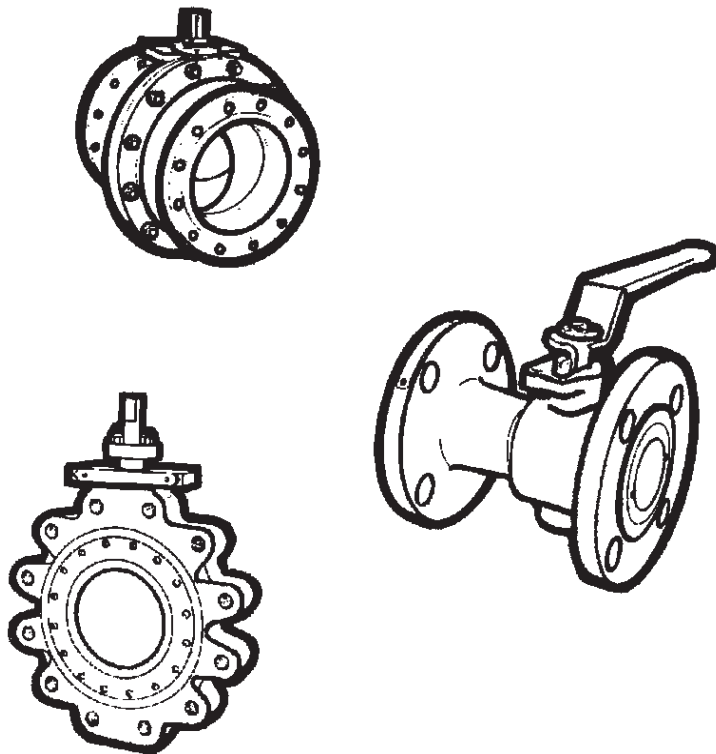


Table of contents

GENERAL	3
Safety precautions	3
INSTALLATION	3
DISASSEMBLY, ASSEMBLY & MAINTENANCE	4
SPECIAL REQUIREMENTS	4
SERVICE / SPARE PART	4

READ THESE INSTRUCTIONS FIRST!

These instructions provide information about safe handling and operation of the valve.

If you require additional assistance, please contact the manufacturer or manufacturer's representative.

SAVE THESE INSTRUCTIONS!

Addresses and phone numbers are printed on the back cover.

1. GENERAL

This instruction manual contains important information regarding the installation, operation and trouble shooting of the *Jamesbury* Chlorine service Valves.

The chlorine valves are prepared for handling both liquid and gaseous chlorine. They are available in screwed end, ANSI Class 150 and Class 300 flanged designs. Body and trim materials, in different combinations to suit the moisture content of the chlorine being handled, include carbon steel, 316 stainless steel, Monel® and Hastelloy C®.

Chlorine valves have been specially cleaned to remove dirt and oil that might react with chlorine, and are assembled using only chlorine-compatible lubricants. All chlorine valves are specially tagged to indicate proper cleaning and assembly.

Please read these instructions carefully and save them for further reference.

WARNING:

AS THE USE OF THE VALVE IS APPLICATION SPECIFIC, A NUMBER OF FACTORS SHOULD BE TAKEN INTO ACCOUNT WHEN SELECTING A VALVE FOR A GIVEN APPLICATION. THEREFORE, SOME OF THE SITUATIONS IN WHICH THE VALVES ARE USED ARE OUTSIDE THE SCOPE OF THIS MANUAL. IF YOU HAVE ANY QUESTIONS CONCERNING THE USE, APPLICATION OR COMPATIBILITY OF THE VALVE WITH THE INTENDED SERVICE, CONTACT VALMET FOR MORE INFORMATION.

1.1 SAFETY PRECAUTIONS

WARNING:

DO NOT EXCEED THE VALVE PERFORMANCE LIMITATIONS!

EXCEEDING THE PRESSURE OR TEMPERATURE LIMITATIONS MARKED ON THE VALVE IDENTIFICATION PLATE MAY CAUSE DAMAGE AND LEAD TO UNCONTROLLED PRESSURE RELEASE, DAMAGE OR PERSONAL INJURY MAY RESULT.

WARNING:

SEAT AND BODY RATINGS!

THE PRACTICAL AND SAFE USE OF THIS PRODUCT IS DETERMINED BY BOTH THE SEAT AND BODY RATINGS. READ THE IDENTIFICATION PLATE AND CHECK BOTH RATINGS. THIS PRODUCT IS AVAILABLE WITH A VARIETY OF SEAT MATERIALS. SOME OF THE SEAT MATERIALS HAVE PRESSURE RATINGS THAT ARE LESS THAN THE BODY RATINGS. ALL OF THE BODY AND SEAT RATINGS ARE DEPENDENT ON VALVE TYPE AND SIZE, SEAT MATERIAL, AND TEMPERATURE. DO NOT EXCEED THESE RATINGS!

WARNING:

BEWARE OF BALL MOVEMENT!

KEEP HANDS, OTHER PARTS OF THE BODY, TOOLS AND OTHER OBJECTS OUT OF THE OPEN FLOW PORT. LEAVE NO FOREIGN OBJECTS INSIDE THE PIPELINE. WHEN THE VALVE IS ACTUATED, THE BALL FUNCTIONS AS A CUTTING DEVICE. DISCONNECT ANY PNEUMATIC SUPPLY LINES, ANY ELECTRICAL POWER SOURCES AND MAKE SURE SPRINGS IN SPRINGRETURN ACTUATORS ARE IN THE FULL EXTENDED/ RELAXED STATE BEFORE PERFORMING ANY VALVE MAINTENANCE. FAILURE TO DO THIS MAY RESULT IN DAMAGE OR PERSONAL INJURY!

WARNING:

WHEN HANDLING THE VALVE OR VALVE/ACTUATOR ASSEMBLY, TAKE ITS WEIGHT INTO ACCOUNT!

REFERENCE THE APPLICABLE TECHNICAL BULLETIN FOR VALVE WEIGHTS.

NEVER LIFT THE VALVE OR VALVE/ACTUATOR ASSEMBLY BY THE ACTUATOR, POSITIONER, LIMIT SWITCH OR THEIR PIPING. PLACE LIFTING DEVICES SECURELY AROUND THE VALVE BODY. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE OR PERSONAL INJURY FROM FALLING PARTS.

2. INSTALLATION

Before installation of any valve into a pipeline, factory attached tags should be checked against the purchase order to assure that the valve is identified as having been prepared for chlorine service, and that the valve type and material conform to requirements of the service intended.

Flow through a *Jamesbury* valve can be in either direction. It is recommended; however, that a screwed end ball valve be installed with the body cap facing upstream, and a flanged ball valve with the body insert facing upstream. Wafer-Sphere® butterfly valves should be installed with the body insert upstream (shaft downstream).

Standard piping practices should be followed. Screwed end valves should be tightened by wrenching at the hex flats nearest the pipe being attached. Flanged valve bolts must be tightened to recommendations given by the manufacturer of the particular type of gasket being used.

Liquid Chlorine Use: To maximize valve life, tighten stem packing immediately after liquid chlorine chills the pipeline.

3. DISASSEMBLY, ASSEMBLY & MAINTENANCE

Basic disassembly, assembly, and maintenance procedures and precautions are the same as those given in the standard Installation, Maintenance, and Operating Instructions (IMO's) for the particular size and style of valve ordered.

WARNING:

FOR YOUR SAFETY, IT IS IMPORTANT THAT THE FOLLOWING PRECAUTIONS BE TAKEN PRIOR TO REMOVAL OF THE VALVE FROM THE LINE OR BEFORE ANY DISASSEMBLY.

1. WEAR ANY PROTECTIVE EQUIPMENT NORMALLY REQUIRED WHEN WORKING WITH CHLORINE DURING REMOVAL AND DISASSEMBLY TO PROTECT AGAINST ANY SPRAY OF TRAPPED CHLORINE.
2. DEPRESSURIZE THE LINE AND VALVE AS FOLLOWS:
 - A. SHUT OFF THE VALVE AND BLEED THE LINE.
 - B. CYCLE THE VALVE TO RELIEVE RESIDUAL PRESSURE IN THE BALL CAVITY BEFORE REMOVAL FROM THE LINE.
 - C. REPEAT CYCLING AFTER REMOVAL.

4. SPECIAL REQUIREMENTS

Prior to reassembly, all components should be cleaned with a suitable cleaner to remove all dirt and oil.

Valves must be reassembled in a clean area using chlorine compatible lubricants. Lubrication should be used only to aid assembly of parts. Very light applications of the lubricant may be applied to the stem and body seals and to threaded mating parts. Among those lubricants considered acceptable are Halocarbon® stop cock grease and Halocarbon 25-10M grease.

Effort must be made to keep valves intended for chlorine service water-free. Chlorine readily reacts with water to form hydrochloric acid which corrodes many metals. It is important to remember this fact if considering some type of hydrostatic leakage testing before reinstalling repaired valves in a line.

Subject to change without prior notice.

Neles, Neles Easyflow, Jamesbury, Stonel, Valcon and Flowrox, and certain other trademarks, are either registered trademarks or trademarks of Valmet Oyj or its subsidiaries in the United States and/or in other countries.

Valmet Flow Control Oy

Vanha Porvoontie 229, 01380 Vantaa, Finland.

flowcontrol@valmet.com

Tel. +358 10 417 5000.

www.valmet.com/flowcontrol

5. SERVICE / SPARE PART

We recommend that valves be directed to our service centers for maintenance. The service centers are equipped to provide rapid turn-around at a reasonable cost and offer new valve warranty with all reconditioned valves.

NOTE: When sending goods to the service center for repair, do not disassemble them. Clean the valve carefully and flush the valve internals. Include the material safety datasheet(s) (MSDS) for all media flowing through the valve. Valves sent to the service center without MSDS datasheet(s) will not be accepted. Send valves to the service center in the half open position.

For further information on spare parts and service or assistance visit our web-site at www.valmet.com/flowcontrol/valves.

NOTE: When ordering spare parts, always include the following information:

- a. Valve catalog code from identification plate,
- b. If the valve is serialized – the serial number (from identification plate)
- c. From exploded view, the ballooned part number, part name and quantity required

