

Jamesbury™ thread-end ball valves with ISO bonnet Eliminator model B 1/4" – 2" (DN8 - 50)

Installation, maintenance and
operating instructions

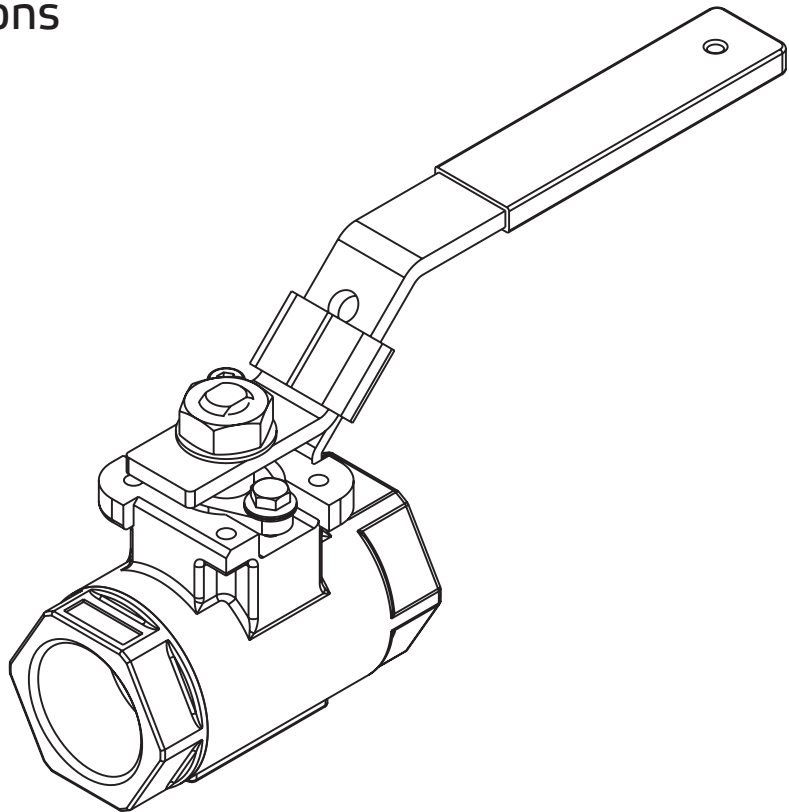


Table of contents

GENERAL	3	ACTUATOR MOUNTING	7
Scope of the Manual	3	General	7
Valve Markings	3	Valve Preparation	8
Safety Precautions	3	Bracket Preparation	8
TRANSPORTATION AND STORAGE	4	Bracket Attachment to Valve	9
INSTALLATION	4	Actuator versus Valve Position	9
General	4	Coupling to Actuator	9
Installing in the pipeline	4	Bracket Attachment to Actuator	9
Valve Insulation	5	Open/Close Position Adjustment	11
Actuator	5	SERVICE / SPARE PART	11
Commissioning	5	EXPLODED VIEW AND PARTS	12
MAINTENANCE	5	CE AND ATEX MARKING	13
General	5	EU DECLARATION OF CONFORMITY	14
Actuated valve	5	VALVE CODES	15
Disassembly	6		
Checking Parts	6		
Assembly	6		
Testing the Valve	7		

READ THESE INSTRUCTIONS FIRST!

These instructions provide information about safe handling and operation of the valve.

If you require additional assistance, please contact the manufacturer or manufacturer's representative.

SAVE THESE INSTRUCTIONS!

Addresses and phone numbers are printed on the back cover.

1. GENERAL

1.1 SCOPE OF THE MANUAL

This instruction manual contains important information regarding the installation, operation and troubleshooting of the Jamesbury™ 1/4" – 2" (DN8 – 50) Eliminator Model B Ball Valves with ISO Bonnet. Please read these instructions carefully and save for further reference.

WARNING:

AS THE USE OF THE VALVE IS APPLICATION SPECIFIC, MANY FACTORS SHOULD BE CONSIDERED WHEN SELECTING A VALVE FOR A GIVEN APPLICATION. THEREFORE, SOME OF THE SITUATIONS IN WHICH THE VALVES ARE USED ARE OUTSIDE THE SCOPE OF THIS MANUAL. IF YOU HAVE ANY QUESTIONS CONCERNING THE USE, APPLICATION OR COMPATIBILITY OF THE VALVE WITH THE INTENDED SERVICE, CONTACT VALMET FOR MORE INFORMATION.

WARNING:

DOUBLE-SEATED BALL VALVE DESIGNS, LIKE THE ELIMINATOR SERIES, CAN UNDER CERTAIN CONDITIONS TRAP FLUID IN THE BALL CAVITY. RAISING THE TEMPERATURE OF THE TRAPPED FLUID CAUSES THE INTERNAL VALVE PRESSURE TO RISE. EXTREME TEMPERATURE RISE CAN BUILD UP EXCESSIVE PRESSURE WHICH COULD LEAD TO UNCONTROLLED PRESSURE RELEASE. DAMAGE OR PERSONAL INJURY MAY RESULT.

1.2 VALVE MARKINGS

Non ASME rated Eliminator valves [9FB & 9NB] do not have an identification plate. Important valve information is stamped directly on the bottom of the valve body. (See **Figure 1a**).

1 - **1 9FA2271XTB**
 2 - **SEAT CWP 1200 PSI**
 3 - **WSP 475 PSI**
 4 - **C18 ASSEMBLED IN USA**

Figure 1a Stamped Body

Identification markings:

- 1 Valve catalog code
- 2 Cold working pressure (psi)
- 3 Working steam pressure (psi)
- 4 Assembly date code

ASME rated or CE Marked Eliminator valves [9FA, 9NA, 9FM & 9NM] have an identification plate attached to the valve. (See **Figure 1b**).

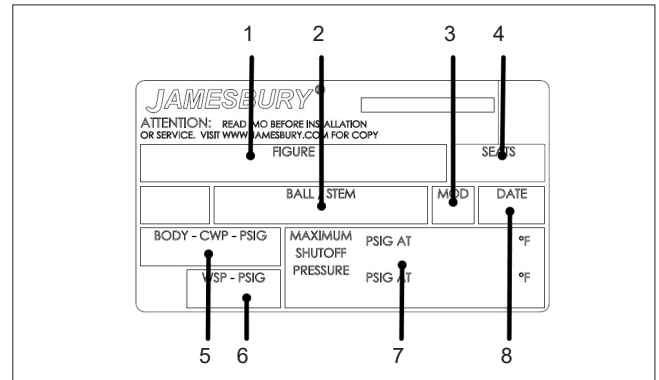


Figure 1b. Identification Plate

Identification markings:

- 1 Valve Catalog Code
- 2 Ball & Stem Material
- 3 Model
- 4 Seat Material
- 5 Body CWP
- 6 Working Steam Pressure
- 7 Maximum Shut-off Pressure
- 8 Date Code

1.3 SAFETY PRECAUTIONS

WARNING:

DO NOT EXCEED THE VALVE PERFORMANCE LIMITATIONS! EXCEEDING THE PRESSURE OR TEMPERATURE LIMITATIONS MARKED ON THE VALVE IDENTIFICATION PLATE, OR BODY, MAY CAUSE DAMAGE AND LEAD TO UNCONTROLLED PRESSURE RELEASE. DAMAGE OR PERSONAL INJURY MAY RESULT.

WARNING:

SEAT AND BODY RATINGS!

THE PRACTICAL AND SAFE USE OF THIS PRODUCT IS DETERMINED BY BOTH THE SEAT AND BODY RATINGS. READ THE IDENTIFICATION MARKINGS AND CHECK BOTH RATINGS. THIS PRODUCT IS AVAILABLE WITH A VARIETY OF SEAT MATERIALS. SOME OF THE SEAT MATERIALS HAVE PRESSURE RATINGS THAT ARE LESS THAN THE BODY RATINGS. ALL THE BODY AND SEAT RATINGS ARE DEPENDENT ON VALVE TYPE AND SIZE, SEAT MATERIAL, AND TEMPERATURE. DO NOT EXCEED THESE RATINGS!

WARNING:**BEWARE OF BALL MOVEMENT!**

KEEP HANDS, OTHER PARTS OF THE BODY, TOOLS AND OTHER OBJECTS OUT OF THE OPEN FLOW PORT. LEAVE NO FOREIGN OBJECTS INSIDE THE PIPELINE. WHEN THE VALVE IS ACTUATED, THE BALL FUNCTIONS AS A CUTTING DEVICE. DISCONNECT ANY PNEUMATIC SUPPLY LINES, ANY ELECTRICAL POWER SOURCES AND MAKE SURE SPRINGS IN SPRING RETURN ACTUATORS ARE IN THE FULL EXTENDED/RELAXED STATE BEFORE PERFORMING ANY VALVE MAINTENANCE. FAILURE TO DO THIS MAY RESULT IN DAMAGE OR PERSONAL INJURY!

WARNING:

WHEN HANDLING THE VALVE OR VALVE/ACTUATOR ASSEMBLY, TAKE ITS WEIGHT INTO ACCOUNT! NEVER LIFT THE VALVE OR VALVE/ACTUATOR ASSEMBLY BY THE ACTUATOR, POSITIONER, LIMIT SWITCH OR THEIR PIPING. PLACE LIFTING DEVICES SECURELY AROUND THE VALVE BODY. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE OR PERSONAL INJURY FROM FALLING PARTS (SEE **FIGURE 2**).

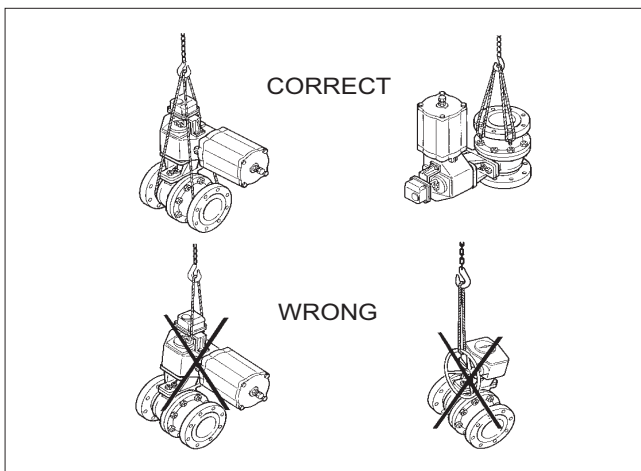


Figure 2 Lifting the valve

2. TRANSPORTATION AND STORAGE

Check the valve and the accompanying devices for any damage that may have occurred during transport.

Store the valve carefully. Storage indoors in a dry place is recommended.

Do not remove the flow port protectors until installing the valve.

Move the valve to its intended location just before installation.

The valve is usually delivered in the open position.

3. INSTALLATION

3.1 GENERAL

Screwed end valves have NPT threads. To insure a leak tight joint, liberal use of a compatible pipe joint compound is necessary. The Eliminator may be installed for flow in either direction. It is recommended, however, that a screwed valve be installed with the body cap facing upstream. Use standard piping practices when installing valves with threaded parts. When tightening the valve to the pipe, apply the wrench to the end nearest the pipe being worked (see **FIGURE 3**).

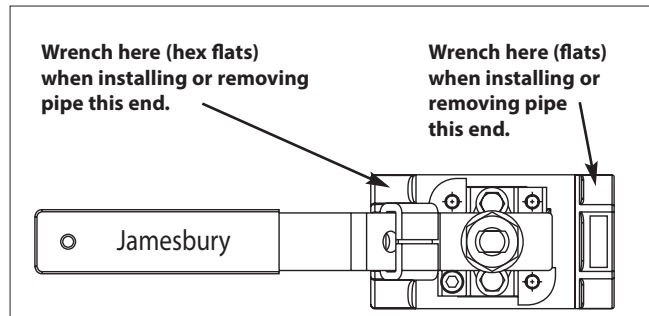


Figure 3 Wrench Instructions

It is not recommended to install the valve with the stem on the underneath side because dirt in the pipeline may then enter the body cavity and potentially damage the stem seals (see **Figure 4**).

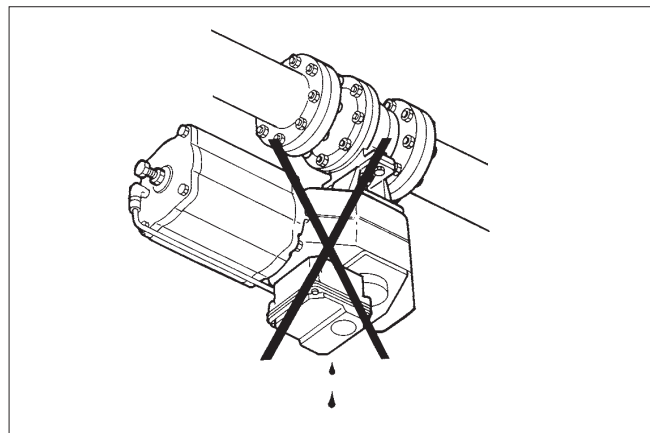


Figure 4 Avoid this mounting position

Remove the flow port protectors and check that the valve is clean inside. Clean valve if necessary.

Flush the pipeline carefully before installing the valve.

Foreign objects, such as sand or pieces of welding electrodes, will damage the ball and seats.

3.2 INSTALLING IN THE PIPELINE

Refer to the Section 4, **MAINTENANCE** for stem seal adjustment.

If there is weepage past the stem seals upon installation, it means the valve may have been subject to wide temperature variations in shipment. Leak-tight performance will be restored by a simple stem seal adjustment described in the **MAINTENANCE** section.

3.3 VALVE INSULATION

Jamesbury Thread-end Ball Valves do not require insulation. If desired, the valve may be insulated; however, the insulation must not continue above the upper level of the valve (see **Figure 5**).

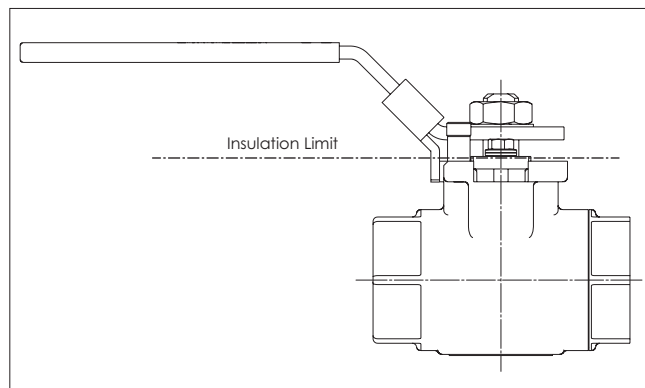


Figure 5 Insulation Limit

3.4 ACTUATOR

WARNING:

WHEN INSTALLING THE ACTUATOR ON THE VALVE, MAKE SURE THAT THE VALVE ASSEMBLY FUNCTIONS PROPERLY. INFORMATION ON ACTUATOR INSTALLATION IS GIVEN IN SECTION 5 OR IN THE SEPARATE ACTUATOR INSTRUCTIONS.

The actuator should be installed in a manner that allows plenty of room for its removal.

The upright position is recommended for the actuator.

The actuator must not touch the pipeline, because pipeline vibration may interfere with its operation.

In certain cases it may be considered advantageous to provide additional support to the actuator. These cases will normally be associated with large actuators, extended stems, or where severe vibration is present. Please contact Valmet for advice.

3.5 COMMISSIONING

Ensure that there is no dirt or foreign objects left inside the valve or pipeline. Flush the pipeline carefully. Make sure that the valve is fully open when flushing.

Ensure that all nuts, fittings, and cables are properly fastened.

If so equipped, check that the actuator, positioner and/ or switch is correctly adjusted. Actuator adjustment is explained in **Section 5**. To adjust any accompanying device(s) refer to the separate control equipment instruction manuals.

4. MAINTENANCE

4.1 GENERAL

Although Jamesbury valves are designed to work under severe conditions, proper preventative maintenance can significantly help to prevent unplanned downtime and in real terms reduce the total cost of ownership. Valmet recommends inspecting valves at least every five (5) years. The inspection and maintenance frequency depends on the actual application and process condition.

Always loosen and tighten fasteners with the appropriate wrench to avoid damaging the valve, handle, linkage, actuator, fittings or flats.

1. Routine Maintenance consists of tightening the compression plate hex head cap screws periodically to compensate for the wear caused by the stem turning against the stem seals. Check to make sure that the compression plate hex head cap screws are tightened to the torque listed in (**Table 1**).
2. Overhaul Maintenance consists of replacing seats and seals. A standard Repair Kit consisting of these parts may be obtained from your Valmet Distributor (See **Table 4**).

TABLE 1		
Hex Head Cap Screw Torque		
Valve Size	Torque IN•LBS	Torque N•m
1/4" & 3/4" (DN 8 & 20)	15	1.7
1" & 1-1/4" (DN 25 & 30)	20	2.3
1-1/2" & 2" (DN 40 & 50)	32	3.6

NOTE: Repair Kits contain the seats and stem seals for both the fire-tested and non-fire-tested valves. Refer to the **ASSEMBLY** Section for details on the correct installation of these parts.

WARNING:

FOR YOUR SAFETY IT IS IMPORTANT THE FOLLOWING PRECAUTIONS BE TAKEN PRIOR TO REMOVAL OF THE VALVE FROM THE PIPELINE OR BEFORE ANY DISASSEMBLY:

WEAR ANY PROTECTIVE CLOTHING OR EQUIPMENT NORMALLY REQUIRED WHEN WORKING WITH THE FLUID INVOLVED. DEPRESSURIZE THE PIPELINE AND CYCLE THE VALVE AS FOLLOWS:

- A. PLACE THE VALVE IN THE OPEN POSITION AND DRAIN THE PIPELINE.
- B. CYCLE THE VALVE TO RELIEVE RESIDUAL PRESSURE IN THE BODY CAVITY BEFORE REMOVAL FROM THE PIPELINE.
- C. AFTER REMOVAL AND BEFORE ANY DISASSEMBLY, CYCLE THE VALVE AGAIN SEVERAL TIMES.

4.2 ACTUATED VALVE

It is generally most convenient to detach the actuator and its auxiliary devices before removing the valve from the pipeline. If the valve package is small or if it is difficult to access, it may be more practical to remove the entire assembly.

NOTE: To ensure proper reassembly, observe the position of the actuator and positioner/limit switch with respect to the valve before detaching the actuator.

WARNING:

ALWAYS DISCONNECT THE ACTUATOR FROM ITS POWER SOURCE, PNEUMATIC, HYDRAULIC OR ELECTRICAL, BEFORE ATTEMPTING TO REMOVE IT FROM THE VALVE!

WARNING:

DO NOT REMOVE A SPRING-RETURN ACTUATOR UNLESS A STOPSCREW IS CARRYING THE SPRING FORCE.

1. Detach the air supply, electrical supply, hydraulic supply and control signal cables or pipes from their connectors.
2. Unscrew the actuator mounting bracket screws.
3. Loosen any coupling fasteners then lift the actuator straight up in line with the valve stem until the coupling between actuator drive and valve stem is completely disengaged.
4. Place actuator in a safe location to avoid damage or personal injury.

4.3 DISASSEMBLY

NOTE: If complete disassembly becomes necessary it is recommended to replace all seats and seals. Refer to the Repair Kit chart (see **TABLE 4**)

NOTE: Always use original OEM parts to make sure that the valves functions properly.

This section covers disassembly of the non-welded valve after removal from the piping. **NOTE: Seal-welded, ASME Class 600 [9_A & 9_M] products cannot be disassembled.**

1. Comply fully with all **WARNINGS** prior to working on the valve.
2. Open and close the valve and leave in the closed position.
3. Remove the handle nut (16), lockwasher (19), and handle (17).
4. Remove hex head cap screws (29), disc springs (31) and compression plate (20).
5. Clamp the valve body (1) securely in a vise.
6. Unscrew and remove the body cap (2)

NOTE: Thread locking compound is used to prevent unwanted rotation of the body cap (2). Heat may be required for disassembly.

7. Remove and discard the old body seal (6). Be careful not to damage the sealing surfaces.
8. With the ball in the closed position, remove ball (3) and seats (5). **NOTE:** A piece of wood or other soft material may be used to unseat the parts from the opposite side. Be careful not to damage the ball or seating surfaces in the body.
9. Push the stem (4) into the body (1) and remove it through the open end.

10. Carefully remove and discard the stem seal (8) and stem bearing (24) being careful not to damage the bearing surfaces. **NOTE:** Fire-Tite® construction contains a secondary stem seal (7) and 2 stem bearings (13), in place of the non-Fire-Tite stem bearing (24). Also, valves with graphite stem seals (8) have an additional upper stem bearing (10) and an anti-extrusion ring (55).
11. Use a wire brush to remove any remaining thread lock compound from the body cap (2) and body (1) threads. Be careful not to scratch or damage the body seal surfaces.

4.4 CHECKING PARTS

1. Clean all disassembled parts.
2. Check the stem (4) and ball (3) for damage. Pay particular attention to the sealing areas.
3. Check all sealing and gasket surfaces of the body (1) and body cap (2).
4. Replace any damaged parts.
5. Replace any fastener where the threads are damaged or have been heated, stretched or corroded.
6. Replace any parts that have cracks, gouges or pits that will affect sealing.

NOTE: When ordering spare parts, always include the following information:

- a. Valve catalog code from Identification plate or body stamping,
- b. If the valve is serialized – the serial number (stamped on the valve body or identification plate),
- c. From **Figure 8**, the ballooned part number, part name and quantity required.

4.5 ASSEMBLY

NOTE: Repair Kits contain replacement seals for *Fire-Tite* and non-*Fire-Tite* constructions.

1. Inspect the parts to ensure sealing surfaces are in good condition and all parts are properly cleaned and prepared for assembly.
2. Clamp the body (1) securely in a vise with the body joint opening facing up.
3. Insert the seat (5) into the body (1) with the flat side down, as shown in (**Figure 7**).
4. Place the stem bearing (24) on the stem (4). **NOTE:** *Fire-Tite* valves have 2 stem bearings (13) and a secondary stem seal (7) as shown in (**Figure 8**).
5. Insert the stem (4) with the bearing(s) into the valve body and through the stem bore in the body, as shown in (**Figure 8**).
6. Holding the stem in place from the inside, install the stem seal (8) and the compression plate (20). For valves with graphite stem seals (8), install upper stem bearing (10) and anti-extrusion ring (55) prior to installing the stem seal (8).
7. Place the disc springs (31) on the hex head cap screws (29). Disc spring orientation is shown in (**Figure 8**). Install the hex head cap screws through the compression plate and bring them down hand tight.

8. While pushing the stem (4) outward from inside the body, tighten the hex head cap screws to the torque provided in (Table 1). Apply torque evenly, alternating between the two cap screws so that the compression plate will be parallel with the valve body bonnet.
9. Align the stem to the ball slot. Insert the ball (3) so that the internal stem blade fits into the ball slot.
10. To prepare for final assembly, obtain a torque wrench. When assembling without a torque wrench, install the body cap (2) into the body (1) without the second seat or the body seal. Tighten firmly by hand or snug with a wrench. Draw a line across the body joint to identify the fully installed position (See Figure 10). The line should be clearly visible on both the body (1) and the body cap (2). Remove the body cap (2) and continue with the assembly.
11. Insert the second seat (5) with the flat facing up. Insert the body seal (6).
12. Apply Loctite™ 272 or equivalent thread locking compound to the threads in a single generous bead, 360 degrees around the body cap (2) threads. Spread the compound until threads are evenly coated. Ideally, thread roots will be filled with the compound with only the crests protruding (See Figure 9).
13. Install the body cap (2) hand tight. Wipe away excess Loctite.
14. With a torque wrench, tighten the body cap (2) to the torque listed in (Table 2). When assembling without a torque wrench, tighten the body cap (2) until fully installed and the lines made in step 10 show the body cap (2) has rotated past the fully aligned position (Figure 9). Wipe away excess Loctite.
15. Install handle (17), lockwasher (19) and handle nut (16) and tighten to torque listed in (Table 3).
16. Cycle the valve slowly to ensure smooth operation.

TABLE 2		
Body cap torque		
Valve Size		Torque – FT•LBS (N•m)
Inches	DN	
3/4	20	150 (203)
1/4-1/2	8-15	100 (136)
1	25	250 (339)
1-1/4	30	350 (476)
1-1/2	40	400 (542)
2	50	500 (678)

TABLE 3		
Handle Nut Torque		
Valve Size		Torque – FT•LBS (N•m)
Inches	DN	
1/4 – 3/4	8 – 20	9 (12)
1, 1-1/4	25, 30	23 (31)
1-1/2, 2	40, 50	33 (45)

4.6 TESTING THE VALVE

WARNING:

WHEN PRESSURE TESTING, EXERCISE CAUTION AND MAKE SURE ALL EQUIPMENT USED IS IN GOOD WORKING CONDITION AND APPROPRIATE FOR THE INTENDED PRESSURE.

If the valve is to be tested prior to returning to service make sure the test pressures are in accordance with an applicable standard.

When testing the valve for external tightness, keep the ball in the half open position.

If testing the valve seat tightness, please contact Valmet for advice.

WARNING:

WHEN PERFORMING ANY TESTS, NEVER EXCEED THE MAXIMUM OPERATING PRESSURE OR MAXIMUM SHUT-OFF PRESSURE LISTED ON THE IDENTIFICATION PLATE OR BODY!

5. ACTUATOR MOUNTING

When these valves are equipped with an actuator, and the actuator is removed to service valve, proper alignment of the actuator driver and valve stem is essential when the actuator is remounted.

5.1 GENERAL

WARNING:

FOR YOUR SAFETY IT IS IMPORTANT THAT THE FOLLOWING PRECAUTIONS BE TAKEN!

BEFORE INSTALLING THE VALVE AND ACTUATOR, BE SURE THE INDICATOR POINTER ON TOP OF THE ACTUATOR IS CORRECTLY INDICATING THE VALVE'S POSITION. FAILURE TO ASSEMBLE THESE TO INDICATE THE CORRECT VALVE POSITION COULD RESULT IN DAMAGE OR PERSONAL INJURY!

WHEN INSTALLING A LINKAGE KIT OR SERVICING THE VALVE/ACTUATOR ASSEMBLY, THE BEST PRACTICE IS TO REMOVE THE ENTIRE ASSEMBLY FROM SERVICE!

AN ACTUATOR SHOULD BE REMOUNTED ON THE SAME VALVE FROM WHICH IT WAS REMOVED. THE ACTUATOR MUST BE ADJUSTED FOR THE PROPER "OPEN" AND "CLOSE" POSITIONS EACH TIME IT IS REMOVED!

THE LINKAGE KITS HAVE BEEN DESIGNED TO SUPPORT THE WEIGHT OF THE NELES ACTUATOR AND RECOMMENDED ACCESSORIES. USE OF THE LINKAGE TO SUPPORT ADDITIONAL EQUIPMENT OR ADDITIONAL WEIGHT SUCH AS PEOPLE, LADDERS, ETC., MAY RESULT IN THE FAILURE OF THE LINKAGE, VALVE, OR ACTUATOR; AND MAY CAUSE DAMAGE OR PERSONAL INJURY!

These actuator mounting instructions describe the steps required to assemble the *Jamesbury* ¼ - 2" (DN8-50) Standard Bore, Series Eliminator Model B Thread-end Ball Valves to actuators. Linkage kits that are needed to mount specific Jamesbury and Neles to different types and sizes of *Jamesbury* valves can be identified by Valmet or your authorized Valmet distributor. These linkages can be classified into two different types, bearing supported adapter and No-Play coupling. Mounting instructions are provided for each type in this section, examples of standard Jamesbury and Neles actuator linkage types are listed in the table below.

Linkage Type	Applicable Jamesbury Actuators	Applicable Neles Actuators
Bearing Supported Adapter	MGR, QPX_/K_, VPVL	B1J, B1C, M Gear
No-Play Coupling	QPX_/M, Torq-Handle	N/A

5.2 VALVE PREPARATION

1. With the valve removed from the pipeline, turn the valve to the closed position.
2. On valves with handles; remove handle nut (16), handle (17), shakeproof washer (19), socket head cap screw (25) and spacer (26). DO NOT loosen the Hex head cap screws (29). (See **Figure 8**).

5.3 BRACKET PREPARATION – (SEE FIGURE A)

1. This step is not applicable for No-Play Coupling Type linkage kits.
2. Roll the bearing strip (3) about its length into a circular shape.
3. Place the bearing strip (3) into round opening in the top center of the bracket (2). Ends of the bearing must not overlap.

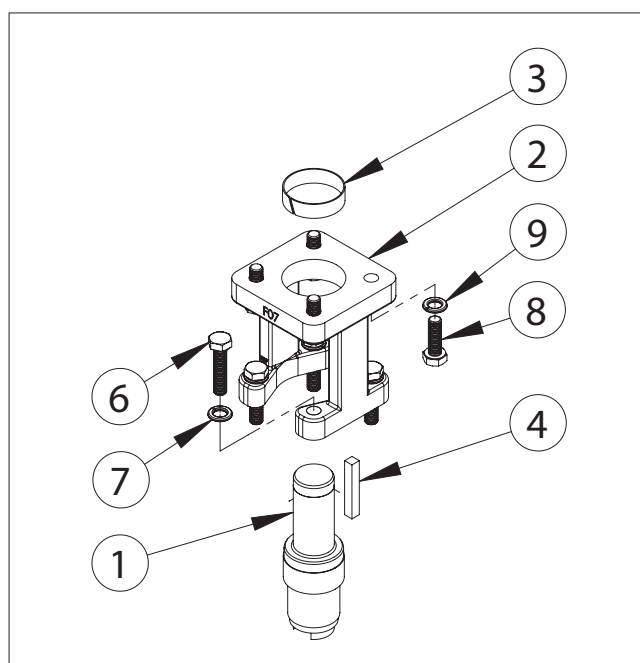
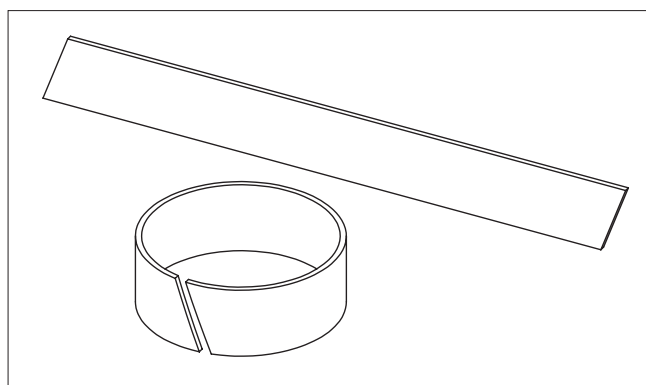


Figure A Linkage Assembly – Key Drive

6. Insert the actuator end of the coupling (1) from the bottom of the bracket (2) into the protruding bearing (3).
7. Press the coupling (1) upward until the bearing (3) sits flush on the bearing shoulder of the coupling (1) and is flush with the top flange of the bracket (2). (See **Figure B**)

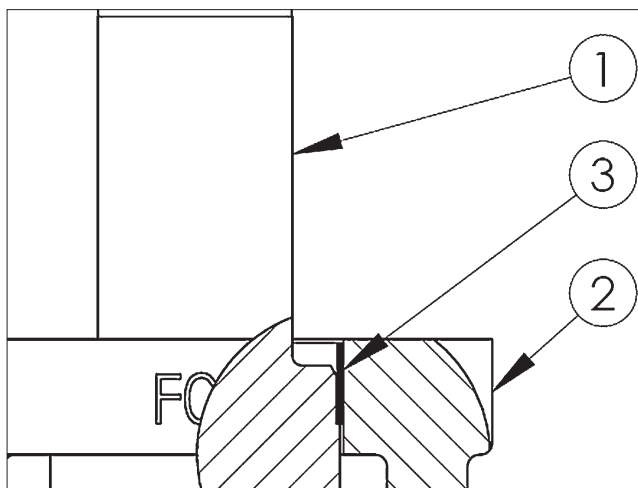


Figure B Proper Bearing Location

4. Slide the bearing (3) into the bracket (2) until about half of its width is protruding from the bottom of the top bracket flange.
5. Inspect the coupling (1) and locate the end that will engage the actuator.

5.4 BRACKET ATTACHMENT TO VALVE

Bearing supported adapter type linkage kits:

1. Lower the bracket/coupling assembly on the valve, aligning the slot in the bottom of the coupling (1) with top of the valve stem.
2. Align the four bracket mounting screw holes with the tapped holes on the valve bonnet.
3. Insert the four hex head cap screws (6) and lockwashers (7) into the tapped holes. Tighten to values in **Table 5**.

No-Play Coupling Linkage Type Kits:

1. Place bracket (2) on the valve and align the four bracket mounting screw holes with the tapped holes on the valve bonnet.
2. Insert the four hex head cap screws (6) and lockwashers (7) into the tapped holes. Tighten to values in **Table 5**.

5.5 ACTUATOR VERSUS VALVE POSITION

IMPORTANT: The actuator and valve position must agree before further assembly.

Since the valve has already been set in the closed position (Step 1 under Valve Preparation), make sure that the actuator is also in the closed position. **EXCEPTION:** if mounting a spring-return actuator for “spring-to-open” operation; cycle the valve to the open position and proceed with the actuator AND valve in the open position.

5.6 COUPLING TO ACTUATOR

This step is not applicable for No-Play coupling type linkage kits (**Figure D**)

This step is not applicable for male/female square drive actuators (**Figure C**)

Key Drive Actuators (**Figure A**): Install the key (4) into the key slot of the coupling (1). The key should be filed to closely fit into coupling and actuator keyway. If the fit is loose, apply Loctite® Keyfit or equivalent.

5.7 BRACKET ATTACHMENT TO ACTUATOR

Bearing supported adapter type linkage kits:

1. Place the actuator onto the valve and bracket assembly aligning the holes in the bracket with the holes in the actuator, and aligning the actuator drive with the coupling. Install the four hex head cap screws (8) and four lockwashers (9) through the bracket and into the actuator. Apply slightly more than finger-tightness to these fasteners, but **DO NOT TIGHTEN**.
2. Cycle the actuator a couple of times, allowing the assembly to position itself for proper actuator-drive to valve-drive alignment. Tighten the four hex head cap screws (8) securing the bracket to the actuator using the values in **Table 5 or 6** as applicable.

No-Play coupling linkage type kits:

1. Place the actuator onto the valve and bracket assembly, aligning the holes of the bracket (2) with the holes in the actuator. Install the four hex head cap screws (8) and four lockwashers (9) through the bracket and into the actuator. Apply slightly more than finger-tightness to these fasteners but **Do not tighten**.
2. If reducers (13) are present in linkage kit; place them inside the coupling halves (1) in the square side pockets. Place the two coupling halves (1) around the valve stem and actuator drive (blade side over the valve stem and square side on the actuator drive side). Fasten the two coupling halves together with socket head cap screws (10), lockwashers (11) and hex nuts (12).
3. Tighten hex head cap screws (8) securing the bracket to the actuator using the values in **table 5 or 6** as applicable.

TABLE 5			
Bolt Size	Torque to Cast/Ductile Body Actuators		
	No Lubrication		
	ft•lbs	in•lbs	N•m
1/4	8	96	11
5/16	16	192	22
3/8	27	324	37
7/16	45	540	61
1/2	67	804	91
9/16	100	1200	136
5/8	135	1620	183
3/4	225	2700	305
7/8	335	4020	454
1	520	6240	705
1-1/8	700	8400	949
1-1/4	990	11880	1342
M6	7	84	9
M8	14	168	19
M10	28	336	38
M12	48	576	65
M16	115	1380	156
M20	225	2700	305
M30	783	9396	1062
M36	1347	16164	1826

TABLE 6			
Bolt Size	Torque to Aluminum Body Actuators		
	No Lubrication		
	ft•lbs	in•lbs	N•m
1/4	6	72	8
5/16	12	144	16
3/8	20	240	27
7/16	30	360	41
1/2	50	600	68
9/16	70	840	95
5/8	90	1080	122
3/4	160	1920	217
7/8	250	3000	339
1	360	4320	488
1-1/8	520	6240	705
1-1/4	700	8400	949
M6	5	60	7
M8	11	132	15
M10	22	264	30
M12	38	456	52
M16	90	1080	122
M20	170	2040	230
M30	570	6840	773
M36	950	11400	1288

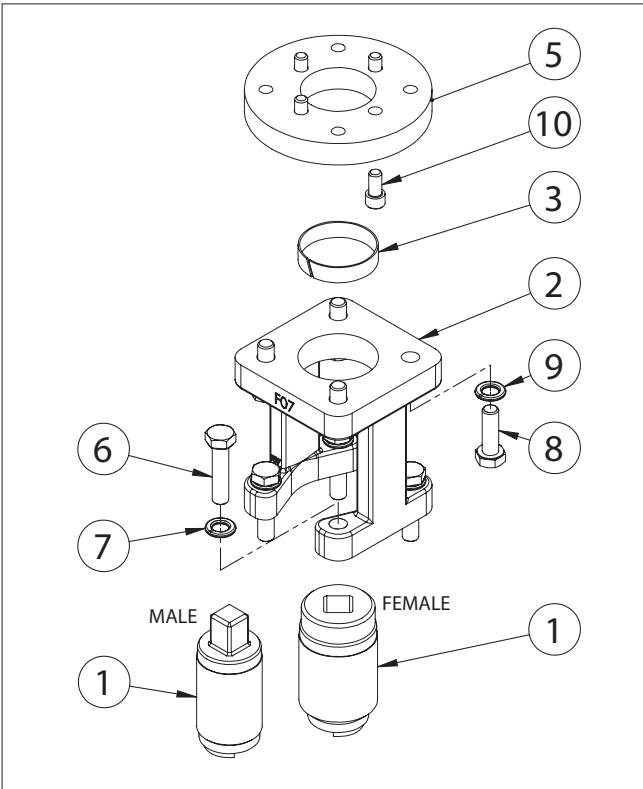


Figure C Linkage Assembly – Square Drive

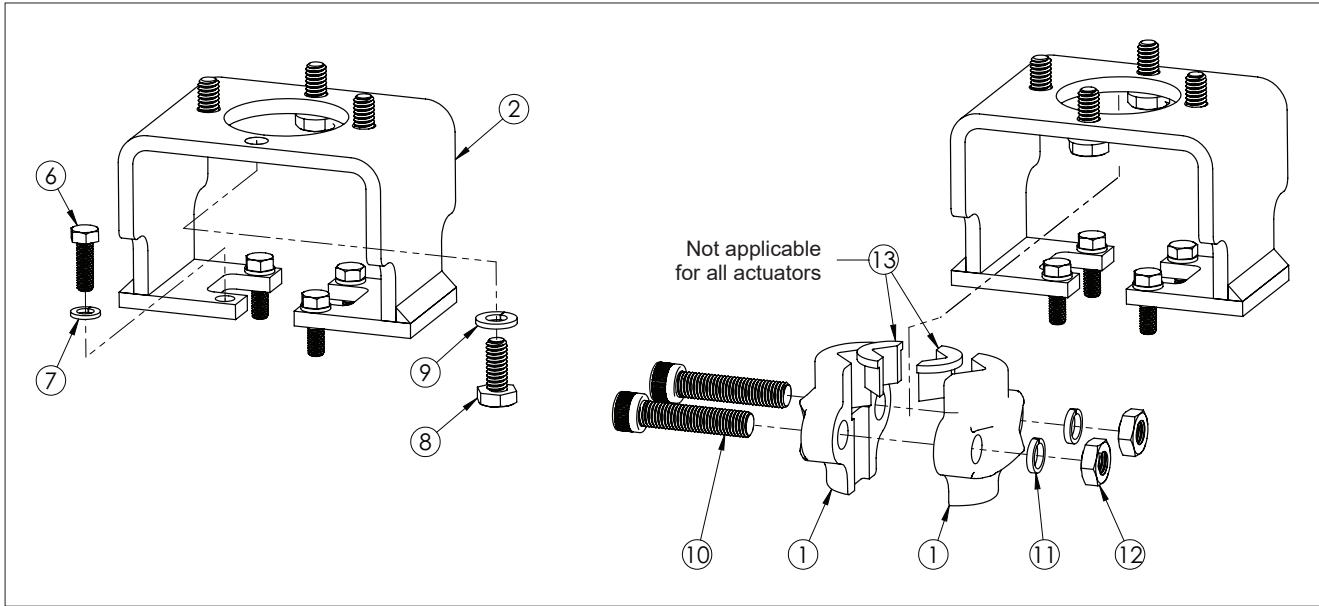


Figure D Linkage Assembly - No-Play Coupling

5.8 OPEN/CLOSE POSITION ADJUSTMENT

NOTE: Refer to the appropriate Installation, Maintenance, and Operating Instructions (IMO) for specific directions on how to adjust the actuator travel stops or limit switch (see **Table 7**).

TABLE 7	
Actuator Installation, Maintenance and Operating Instructions	
Actuator	IMO
QPX	215
VPVL	553
B1C	6 BC 71
B1J	6 BJ 71
BCH	6 BCH 70
M	549
ADC	I440, I4500 or I4600
ESR	I7016
I	I6500, I6600 or I6700
LCR	I1262
LCU	I1263
Q6	I1227 or I1383
QX	I3000
V	I2100, I2475, I2500 or I5500
Torq-Handle®	71
Contact your authorized Valmet Distributor for copies of these instructions	

The actuator travel stops should be adjusted so that there is proper ball position in the full open and full close valve position. Use the following procedures to determine correct ball position.

Valve Open Position: With the valve in the open position (actuator is against the "OPEN" travel stop), The maximum allowable misalignment of the ball port in relation to the body port is 1/32 inch (0.8 mm) on either side of the ball. Do not use the seat ID to measure misalignment since, in many cases; it is larger than the ball or body port.

Valve Close Position: With the valve in the closed position (actuator is against the "CLOSE" travel stop), make a pencil mark on the ball at the 9:00 o'clock and 3:00 o'clock locations as shown in (**Figure 6**). Open the valve part way, and measure dimension "A". This measurement should deviate no more than $\pm 1/32$ inch (± 0.8 mm) from the value given in (**Table 8**) for all valves.

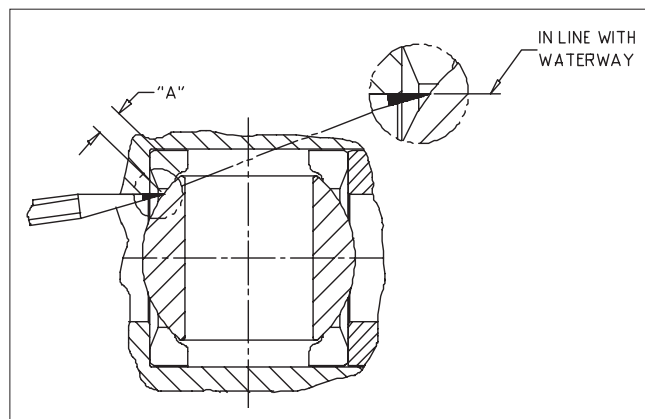


Figure 6 Correct Ball Position

TABLE 8	
Dimension "A" for Valve Closed Position Adjustment	
Valve Size	Dimension "A" - inch (mm)
1/4" - 1/2" (DN8-15)	0.11 (2.79)
3/4" (DN20)	0.14 (3.56)
1" (DN25)	0.17 (4.32)
1 1/4" (DN32)	0.22 (5.59)
1 1/2" (DN40)	0.25 (6.35)
2" (DN50)	0.28 (7.11)

6. SERVICE / SPARE PART

We recommend that valves be directed to our service centers for maintenance. The service centers are equipped to provide rapid turn-around at a reasonable cost and offer new valve warranty with all reconditioned valves.

NOTE: When sending goods to the service center for repair, do not disassemble them. Clean the valve carefully and flush the valve internals. Include the material safety datasheet(s) (MSDS) for all media flowing through the valve. Valves sent to the service center without MSDS datasheet(s) will not be accepted.

For further information on spare parts and service or assistance visit our web-site at www.valmet.com/flowcontrol.

NOTE: When ordering spare parts, always include the following information:

- Valve catalog code from identification plate,
- If the valve is serialized – the serial number (from identification plate)
- From **Figure 8**, the ballooned part number, part name and quantity required.

7. EXPLODED VIEW AND PARTS

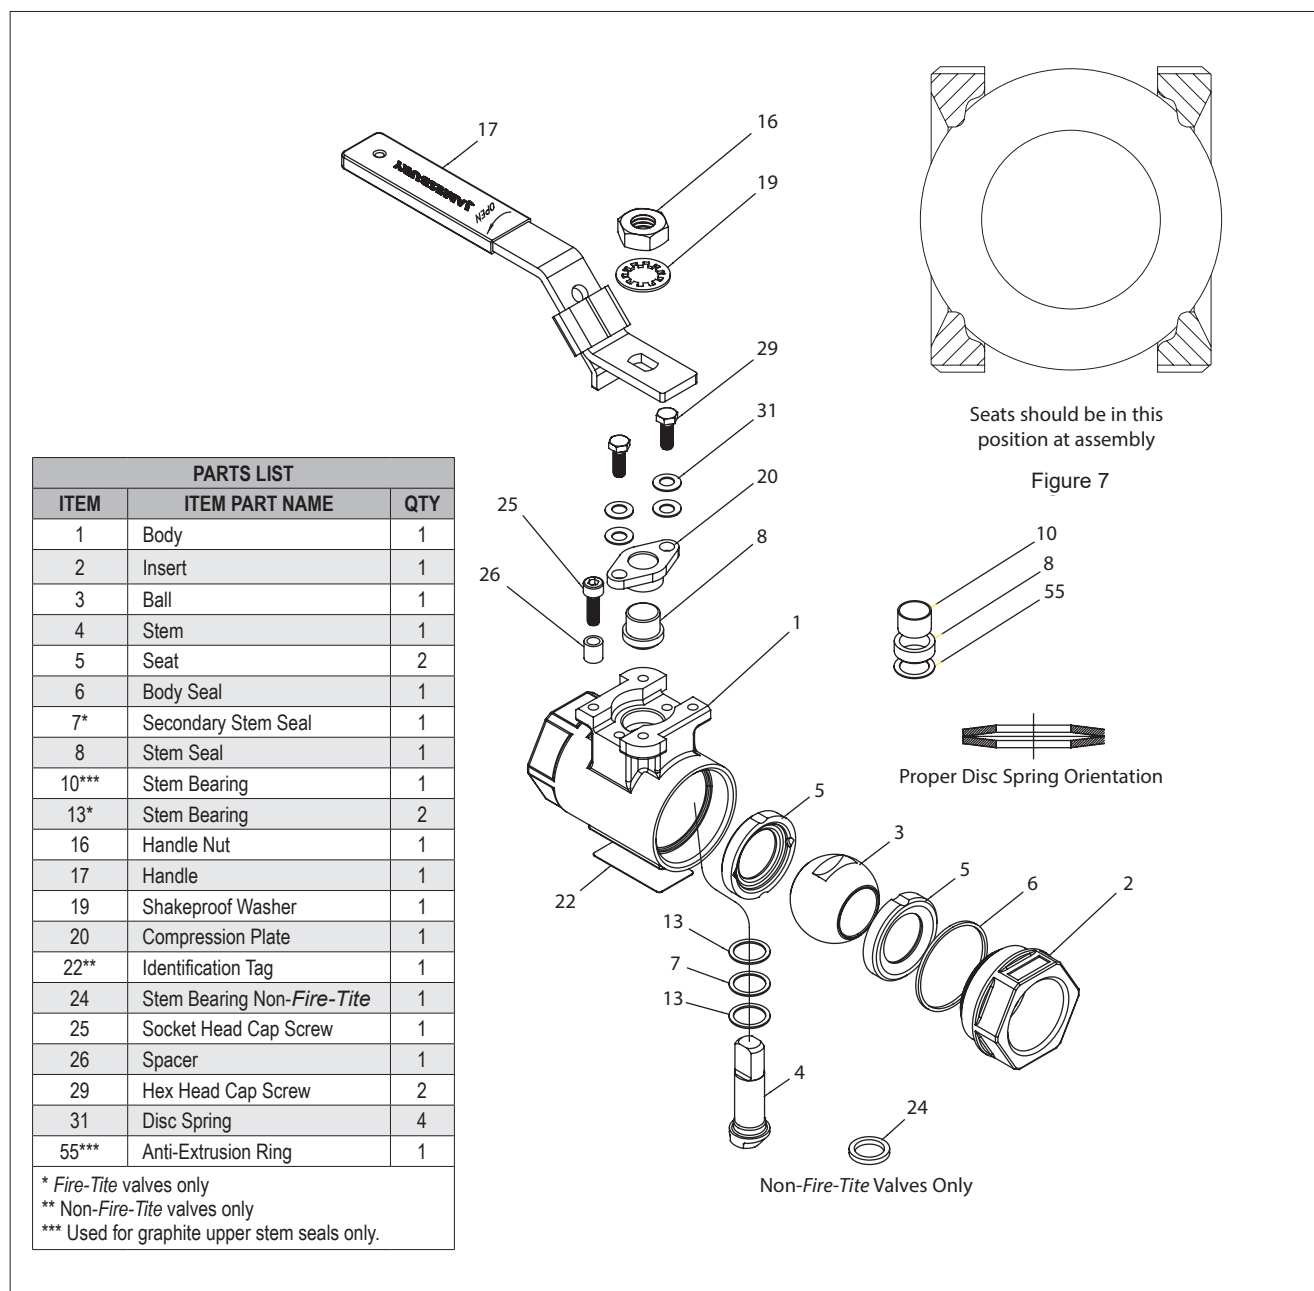


Figure 8

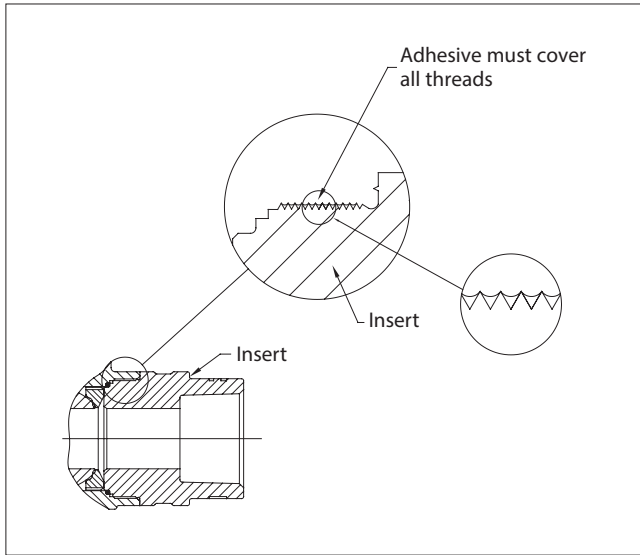


Figure 9

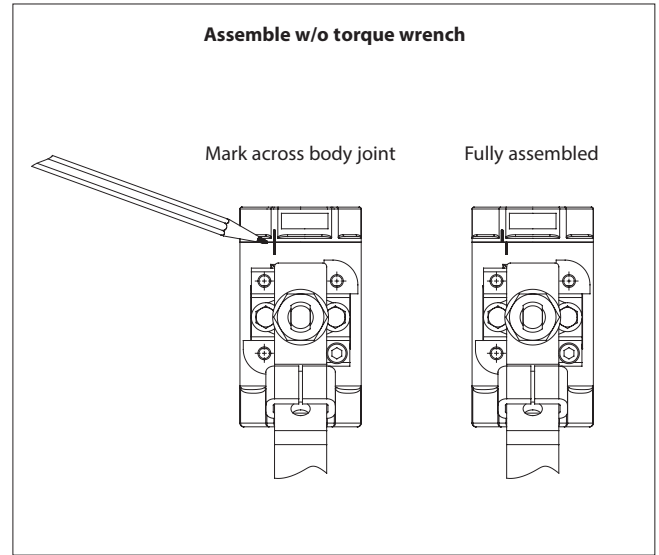


Figure 10

TABLE 4 – REPAIR KITS						
REPAIR KITS	VALVE SIZE – INCHES (MM)					
VALVE SIZE	1/4" – 1/2" (DN 8 – 15)	3/4" (DN 20)	1" (DN 25)	1-1/4" (DN 30)	1-1/2" (DN 40)	2" (DN 50)
XTREME® Seats	RKN-354XT	RKN-355XT	RKN-356XT	RKN-357XT	RKN-358XT	RKN-359XT
PTFE Seats	RKN-354TT	RKN-355TT	RKN-356TT	RKN-357TT	RKN-358TT	RKN-359TT
Acetal Seats	RKN-354RT	RKN-355RT	RKN-356RT	RKN-357RT	RKN-358RT	RKN-359RT
UHMW Seats	RKN-354UU	RKN-355UU	RKN-356UU	RKN-357UU	RKN-358UU	RKN-359UU

8. CE AND ATEX MARKING

When applicable, the valve meets the requirements of the European Directive 2014/68/EU relating to pressure equipment, and has been marked according to the Directive.

When applicable, the valve meets the requirements of the European Directive 2014/34/EU relating to equipment and protective systems intended for use in potentially explosive atmospheres, and has been marked according to the Directive.

Refer to EU Declaration of Conformity below, for product details.

9. EU DECLARATION OF CONFORMITY



EU DECLARATION OF CONFORMITY

for ATEX approved valves



Manufacturer:
Valmet Flow Control Inc.
Shrewsbury, MA 01545-8044
USA

*Valmet Flow Control (Jiaxing) Co., Ltd.
Jiaxing, China

*) Also manufactures certain series

EU Authorised Representative: Valmet Flow Control Oy, Vanha Porvoontie 229, 01380
Vantaa, Finland. Contact details: [+358 10 417 5000](tel:+358104175000)

This declaration of conformity is issued under the sole responsibility of the manufacturer.

This declaration of conformity is issued under the sole responsibility of the manufacturer.		
Product:	Jamesbury Threaded/Welded End & Flanged Ball valves	
Type:	1/4" – 2" 4000 & Eliminator Series (**) 1/2" – 24" 7000 & 9000 Series (**)	
ATEX group and category:	<div>Ex II 2 GD, II 3 GD</div>	
Ex GAS:	Ex h IIC 85°C...Tmax Gb/Gc	
Ex DUST:	Ex h IIIC T85°C...T(Tmax) Db/Dc	
Tmax= valve max. temperature in name plate		

(** Dependent on valve code designation.

Manufacturer's certificates:

Standard / Directive	Notified Body and NoBo number	Certificate No.
ISO 9001:2015	LRQA (Certification body)	10531829
PED 2014/68/EU Module H	DNV Business Assurance Italy S.r.l. 0496	142306-2013-CE-FIN-ACCREDIA
ATEX 2014/34/EU Annex IV	DNV Product Assurance AS Norway 2460	Presafe 18 ATEX 91983Q Issue 6

ATEX 2014/34/EU Annex VIII technical files are archived by Notified Body number 0537

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

PED 2014/68/EU	Valve
ATEX 2014/34/EU	Non-electrical equipment

Main components:

Valve:
The valve is suitable for service up to PED Cat III
Valve design standard: ASME B16.34

Installation, Maintenance and Operating instructions manual (IMO) must be followed before installation in order to ensure proper and safe mounting and usage of equipment.

The product above is manufactured in compliance with the applicable European directives and technical specifications/standards EN10204:3.1. The product is in conformity with the customer order.

Instrumentation and accessories having equal protection concept, level and performance specification with the original can be presumed to be in conformity with this Declaration of Conformity.

Protection from e.g. static electricity caused by the process or connected equipment must be considered by the user (EN 60079-14 § 6). EN 60079-19 applies for modifications.

Non-electrical equipment is according EN 80079-37:2016 and EN 80079-36:2016. The actual surface temperature of non-electrical equipment is depended on the process and ambient conditions (EN 80079-36:2016 § 6.2.5 and 6.2.7). The protection from high or low temperature must be considered by the end user before put into service.

The product does not possess any residual risk according to hazard analysis conducted under the applicable directives providing that the procedures stated by the IMO are followed and the product is used under conditions mentioned in the technical specifications.

Documents with digital and/or e-signature conveyed by Valmet Flow Control conform to the Regulation (EU) No 910/2014 as well as the national code on e-signatures. In order to secure the integrity of the document, the authenticity of the sender, and indisputableness of the dispatch the identification is covered by individual ID codes, passwords, and by regularly changing passwords. The authorization to sign documents is based on organizational position and/or is task related. The impartial third party in the company bestows the access right with predefined authorities to particular databases.

Shrewsbury 10.9.2024

Juha Virolainen, Global Quality Director

10. VALVE CODES

1	2	3	4	5	6	7	8
1	9F	A	C	22	36	XT	B

Example: 1" Eliminator, Class 600, Chlorine Service, Carbon Steel Body, Monel Trim, Xtreme Seats, model B

Jamesbury Brand Eliminator Ball Valve

1. sign	Valve Size (inch / mm)
inches	1/4, 3/8, 1/2, 3/4, 1, 1 1/4, 1 1/2, 2
DN	8, 10, 15, 20, 25, 30, 40, 50

5. sign	Body Material
22	Carbon Steel
36	Stainless Steel

2. sign	Body Style
9F	Fire-Tite Standard
9N	Non-Fire-Tite

6. sign	Trim Material
00	Same as body material (Carbon Steel not available)
36	316 Stainless Steel
71	Monel
73	Hastelloy C
HB	316SS Ball / 17-4PH Stem

3. sign	Pressure Class Conformance
A	ASME Class 600
B	Non-ASME
M	ASME Class 600 with Metric Nameplate

7. sign	Seat Material
Fire-Tite Options	
TT	PTFE Seats
XT	Xtreme Seats
Non-Fire-Tite Options	
UU	UHMW Polyethylene Seats
RT	Acetal Seats

4. sign	Special Service
blank	Standard Service
A	ASME Class 600
C	Chlorine
O	Oxygen
V	High Vacuum
V/C	High Vacuum Certified

8. sign	Valve Model
B	Eliminator Model B

Valmet Flow Control Oy

Vanha Porvoontie 229, 01380 Vantaa, Finland.

flowcontrol@valmet.com

Tel. +358 10 417 5000.

www.valmet.com/flowcontrol

Subject to change without prior notice.

Neles, Neles Easyflow, Jamesbury, Stonel, Valvcon and Flowrox, and certain other trademarks, are either registered trademarks or trademarks of Valmet Oyj or its subsidiaries in the United States and/or in other countries.

