

Neles™ Globe valve

Series GU, GB, GM, AU, AB,
AM, GW

Rev 1

Safety manual



Table of Contents

1	Introduction	3
2	Structure of the globe valve.....	3
2.1	Components and description of use.....	3
2.2	Permitted valve types	3
2.3	Supplementary valve documentation	3
3	Using an globe valve in safety systems	3
3.1	Safety function.....	3
3.2	Environmental and application restrictions	3
3.3	Useful lifetime.....	3
3.4	Connecting an globe valve to the safety system.....	4
3.5	Random hardware integrity	4
3.6	Systematic integrity	5
3.7	Additional information.....	5
4	Installation	5
5	Operation	5
5.1	Recommended proof test	5
5.2	Recommended partial stroke test.....	5
5.3	Maintenance.....	6
6	References	6
	Appendix 1. An example of reliability (PFD) calculation for complete final element	6
	Appendix 2. Equations to calculate PFD for 1oo1 and 1oo1D final elements.	7

1. Introduction

This safety manual provides the functional safety related information required to integrate and use globe valve in safety systems in compliance with IEC 61508 standard. The safety manual shall be used together with Installation, Manufacturer and Operation manual of Neles Type GU, GB, GM, AU, AB, AM, GW – valve.

Neles Type GU, GB, GM, AU, AB, AM, GW – valve is a linear globe valve which is used in automated on/off and control process applications. In on/off service valve is either fully closed or open. Neles Type GU, GB, GM, AU, AB, AM, GW – valve is commonly part of automated on/off (block) valve assembly which consist of valve, actuator, accessories and linkage parts. Valve body part of the automated on/off valve assembly is considered in this document. Actuator of the automated on/off valve assembly can be pneumatically, electrically or hydraulically powered. Accessory part of the automated on/off valve assembly may consist of partial stroke test device such as Neles ValvGuard or solenoid valves as well as additional instruments such as quick exhaust valve, booster and/or limit switch.

In safety applications automated on/off valve assembly is part of safety instrumented function (SIF) which purpose is to protect plant, environment and personnel against a hazard. In safety systems valve assembly is commonly called final element subsystem. The primary function of final element is to either isolate the process or release (blowdown) energy for instance pressure from the vessel.

2. Structure of the globe valve

2.1 Components and description of use

See the IMO paragraph 1 or the documentation delivered with the valve for the detailed technical description of the valve.

2.2 Permitted valve types

The information in this manual pertaining to functional safety applies to all valve sizes and variants mentioned in the valve type coding in the IMO.

2.3 Supplementary valve documentation

1. 4GV70, 4GV71, 4GV73, 4GV74, 4GV75, Installation, Maintenance and Operating Instructions (IMO)
2. 4GV20, 4GV21, 4GV23, 4GV24, 4GV25, Technical bulletin

These are available from Valmet or for download from <https://www.neles.com/products/valves/globe-valves/>

3. Using an globe valve in safety systems

3.1 Safety function

When de-energised, the complete valve assembly goes to its fail safe position. The safety position of the bare shaft valve can be either fully closed or fully open. The safety action within the assembly is normally initiated by a solenoid valve or intelligent partial stroke device. This releases actuator power resulting in the valve reaching its safety position. Hence the safety function of bare shaft valve is linear (full stroke) either to close the fluid flow through valve or open the fluid flow through valve.

3.2 Environmental and application restrictions

Ensure that the valve is selected and specified correctly for the application and that the process conditions and atmospheric conditions are taken into account. Environmental limits for which product is designed and general instructions for applications are given in the product IMO and technical bulletin. Please, contact Valmet in case more details are needed.

The reliability values given in paragraph 3.5 assume the valve is selected correctly for the service and all the environmental and application restrictions are considered. If the valve is used outside of its application or environmental limits, or with incompatible materials, the reliability information shown in paragraph 3.5 is not valid.

3.3 Useful lifetime

The useful lifetime needed for reliability estimations is typically 8 – 12 years for Neles GU, GB, GM, AU, AB, AM, GW – series valve. Note that the design life of the valve is higher and should not be mixed to useful lifetime used in reliability evaluations.

3.4 Connecting an globe valve to the safety system

The complete final element (valve-actuator-accessories assembly) is connected to the safety system through an electrical connection which is commonly operates intelligent partial stroke device or solenoid valve (see Fig 1).

A single final element installation provides hardware tolerance (HFT) equal to 0. In case HFT equal to one is required then two final elements installed in series or parallel must be used.

Note, that the single final element may contain internal redundancy in the accessories part in some cases required 1oo2 solenoid valves are required.

Note, that the bare shaft valve cannot be connected to the safety system directly.

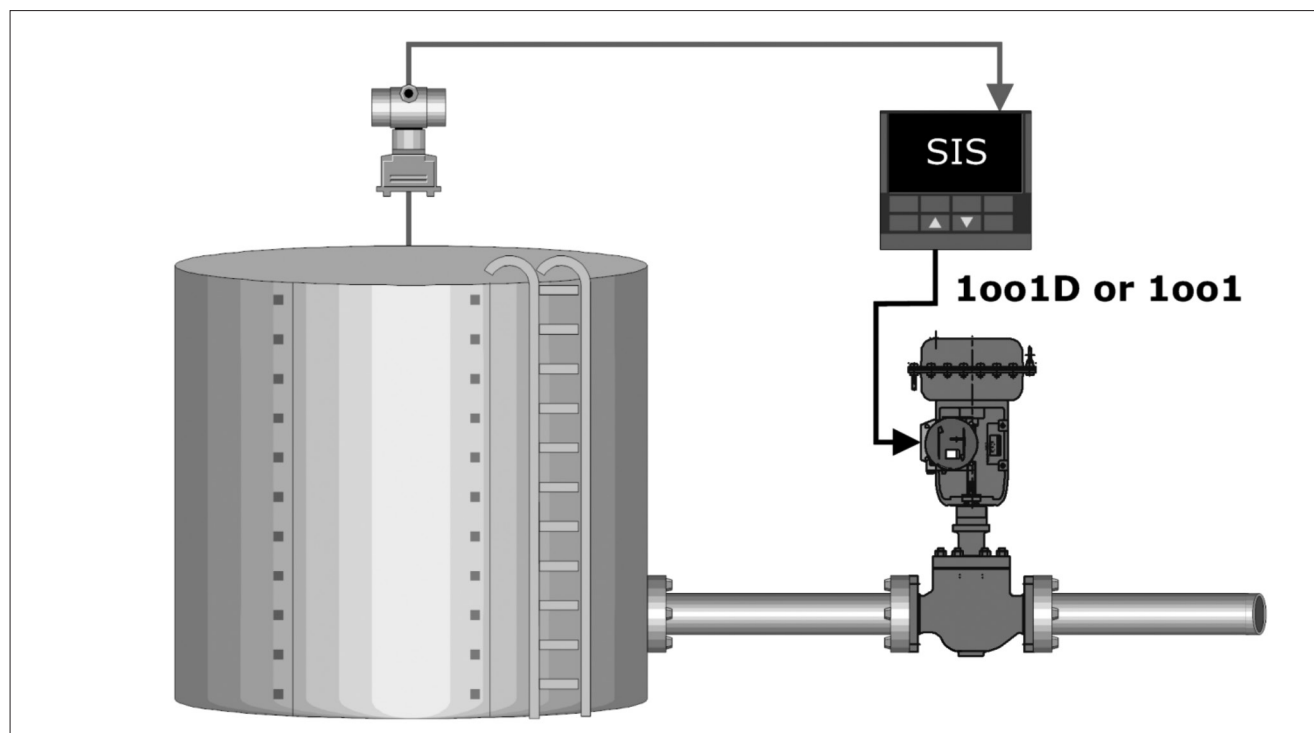


Fig. 1. Schematical picture of safety loop. Final element is connected to safety system (SIS) via solenoid or safety valve controller (partial stroke device). This shows single channel final element subsystem with voting 1oo1D or 1oo1.

3.5 Random hardware integrity

The table below shows the information to be used in reliability calculations for GU, GB, GM, AU, AB, AM, GW – valve. The data represent the bare shaft valve which is one part of the final element.

All the other safety related components of the final element should be included when the reliability of the final element subsystem is estimated. The analysis must also account for the hardware fault tolerance and architecture constraints for the complete final element subsystem.

An example calculation of an average probability of failure on demand (PFD) is shown in Appendix 1.

Table 1 Failure rate data without partial stroke test.

Architecture type		A
Diagnostic coverage, DC [%]	DC [%]	0
Safe Failure Fraction	SFF	N/A*
Dangerous failures	λ_D [failures / hour]	1.15E-6
Dangerous undetected failures	λ_{DU} [failures / hour]	1.15E-6
Dangerous detected failures, PST	λ_{DD} [failures / hour]	0
Safe failures	λ_S [failures / hour]	0
Safe undetected failures	λ_{SU} [failures / hour]	0
Safe detected failures	λ_{SD} [failures / hour]	0

*Safe failure fraction must be assessed for complete final element assembly.

3.6 Systematic integrity

Systematic integrity requirements according IEC 61508 (2010) up to and including SIL2 are fulfilled. These requirements include adequate integrity against systematic errors in the product design, and controlling systematic failures in the selection and manufacturing process. GU, GB, GM, AU, AB, AM, GW – valves must not be used in safety integrity functions with higher than stated SIL level without prior in use statement or redundant designs.

3.7 Additional information

Personnel doing the maintenance and testing must be competent to perform the required actions.

Verify final element is operational before startup.

Proof testing should be recorded and documented according to IEC 61508/61511 and maintenance actions done according to Paragraph 5.

Unless the procedures above are properly followed, the reliability data shown in 3.5 may not be valid.

4. Installation

The Neles Type GU, GB, GM, AU, AB, AM, GW – valve must be installed into the pipeline according to Valmet instructions given in the IMO. Possible standards relevant to applications, local requirements etc should be also considered. Installation must be done by competent persons. In case of bare shaft valve is installed to actuator assembly, verify the suitability of all linkage parts (see more details in IMO). It is particularly important to confirm that all components are working properly together.

Incorrect installation may jeopardize the validity of reliability data given in Paragraph 3.5.

In cases where the complete valve assembly is shipped by Valmet, the complete valve assembly is tested and configured according Valmet internal procedures, except where project specific procedures are used.

5. Operation

5.1 Recommended proof test

The purpose of the proof testing is to detected failures of the complete final element subsystem. Valmet recommends the following proof test procedure:

- Visual inspection. Check that there are no unauthorized modifications in SIS final element. Check that the SIS final element is in the normal position and that verify all accessories are according the specification for the SIS valve normal operation. Verify that there is no observable deterioration in the SIS valve, such as pneumatic leakages, visible damage or impurities on the SIS valve.
- Bypass the SIS valve if full stroke may cause unnecessary process shutdown or other negative effects.
- Perform the safety action (full stroke) preferably using the safety system. Verify that the SIS final element achieves the safe position within the required time specified by the application. Verify also the shutoff tightness for tightness critical applications. Note, that tightness measurements might require removing the valve from the pipeline. If the valve is removed from the pipeline, repeat full stroke test also after re-installation.
- Restore the SIS valve into normal position.
- Visual inspection. Check the SIS final element is in normal position and verify all accessories are according the specification for the SIS valve normal operation. Inspect visually there is no observable deterioration in SIS final element.
- Record all results and observations into corresponding database with necessary audit trail information.
- Remove the SIS final element bypassing.

5.2 Recommended partial stroke test

A partial stroke test is a verified movement of an emergency valve from the normal operating position toward the safe state. Partial stroke testing can be done while the process is on-stream without disturbing the process to provide early detection of automated block valve failure modes and to improve probability of failure on demand.

Valmet recommends using testing capability available with intelligent partial stroke devices such as Neles ValvGuard. In order to obtain the full benefit of diagnostics provided by partial stroke devices ensure first that the device is calibrated and configured correctly according to manufacturer's guidelines.

Before initiating the partial stroke ensure that the partial stroke will not cause a process hazard. If needed, the possible pressure disturbance can be further estimated by using Neles Nelprof valve sizing software.

The required partial stroke test interval may depend on application and targeted SIL level, but test intervals from 1 month to 6 month are generally recommended. Partial stroke size is typically from 10 to 20 % in shutdown service and from 3 to 5 % in blowdown service.

Note, that small amount flow resulted through GU, GB, GM, AU, AB, AM, GW – series valve during partial stroke in blowdown service.

Partial stroke test can be initiated either manually or automatically. The test interval is set by the user. The user can be reminded by partial stroke scheduler system in manual mode and the test interval is controlled by intelligent partial stroke test device in the automatic mode. Contact the partial stroke test device manufacturer for more details on how to select and set parameters to control partial stroke size and frequency.

5.3 Maintenance

Any repair for the Neles Type GU, GB, GM, AU, AB, AM, GW – valve must be carried out by Valmet or competent personnel. All repair must be done according to Valmet maintenance procedures given in the corresponding IMO. After the maintenance, do shell test and verify seat tightness if necessary according to relevant tightness standards. Verify the functionality of the valve including the assembly regarding the safety function in question,

Note, that all maintenance actions should be recorded.

Valmet Service provides recommended spare part kits defined in the Bill Of Material of every Instructions, Maintenance and Operation (IMO) manual. The need for parts replacement is directly comparable to the amount of operations done by the valve unit during its lifetime and the severity of service.

Soft sealing materials especially are affected by aging and useful lifetime depends strongly on the application. Therefore the condition of those components should be checked carefully during proof testing. In optimum operating conditions the interval may be extended up to 10 years. The estimated typical time for spare parts change is 0 to 2 times during the valve useful lifetime. Spare part sets can be found from the IMO paragraph 10. Possible failures must be overhauled in case of failure or doubt observed in proof testing.

6. References

- [1] IMO
- [2] IEC 61508 – Part 1 to 7 (2010)
- [3] Technical bulletin

Appendix 1. An example of reliability (PFD) calculation for complete final element

GU, GB, GM, AU, AB, AM, GW – valve and VD-series actuator equipped with Neles ValvGuard for partial stroke and safety action.

SIL
Calculate Save

▼ SIL example

▼ Area

▼ VB

▼ SIL

▼ VC

▼ VD

▼ VD

▼ SIL

FINAL ELEMENT SETUP

Safety position: Close

Diagnostic coverage (DC): Valve + Actuator + ValvGuard PST

SELECTION

Close

Valve + Actuator + ValvGuard PST

TEST INTERVALS

UNIT

VALUE

Full stroke test (TFST)	Months	48
Partial stroke test (TPST)	Months	3
Pneumatic test (TPNEUMATIC)	Days	7

VALVE AND ACTUATOR

DEVICES

ARCHITECTURE

NAME

AD [1/h]

DC

MTTR [h]

PFD

Valve	1001D	GU/AU (OPEN FLUID FLOW)	2,23e-7	0,33	24	2,704e-3
Actuator	1001D	VD-SERIES (SPRING)	1,65e-7	0,77	24	8,08e-4

ACCESSORIES

DEVICES

ARCHITECTURE

NAME

AD [1/h]

DC

MTTR [h]

PFD

Intelligent PST	1001D	VG8000F/H	6,33e-7	0,75	4	2,815e-3
Instrument 1	None					
Instrument 2	None					
Instrument 3	None					
Instrument 4	None					

RESULT

VALUE

PFD total	6,327e-3
SIL	2

Note: Final element is suitable for use in safety systems up to and including SIL 2

GU, GB, GM, AU, AB, AM, GW – valve and VC-series actuator equipped with solenoid valve controller for safety action.

SL - Copy Calculate Save

- SL example
- Area
- VB
- SL
- VC
- SL
- SL - Copy
- VD
- SL
- SL - Copy

FINAL ELEMENT SETUP

FINAL ELEMENT SETUP	SELECTION
Safety position	Close
Diagnostic coverage (DC)	No diagnostics test

TEST INTERVALS

TEST INTERVALS	UNIT	VALUE
Full stroke test (TFST)	Months	48

VALVE AND ACTUATOR

DEVICES	ARCHITECTURE	NAME	AD [1/h]	DC	MTTR [h]	PFD
Valve	1oo1	GM/GB/AM/AB (OPEN FLUID FL	2,09e-7	0	24	3,667e-3
Actuator	1oo1	VC-SERIES (DOUBLE ACTING)	2,01e-7	0	24	4,404e-3

ACCESSORIES

DEVICES	ARCHITECTURE	NAME	AD [1/h]	DC	MTTR [h]	PFD
Instrument 1	1oo1	SOV GENERIC 3-WAY	5,85e-7	0	4	1,025e-2
Instrument 2	None					
Instrument 3	None					
Instrument 4	None					

RESULT

RESULT	VALUE
PFD total	1,232e-2
SL	1

Note Final element is suitable for use in safety systems up to and including SIL 1

Appendix 2. Equations to calculate PFD for 1oo1 and 1oo1D final elements.

An average value of probability of failure on demand for 1oo1D architecture with diagnostic is given by equation

$$PFD_{AVG} = DC * \lambda_D * TI_{PST}/2 + (1-DC) * \lambda_D * TI_{FST}/2 + \lambda_D * MTTR$$

where DC is diagnostic coverage, λ_D is dangerous failure rate, TI_{FST} is full stroke test interval, TI_{PST} is partial stroke test interval and MTTR is mean time to repair.

Diagnostic coverage provided by partial stroke is utilized for valve, actuator, quick exhaust valve and volume booster. Diagnostic test for solenoid or air operated valve is not available.

ValvGuard is using diagnostic coverage provided by internal pneumatic diagnostic test or partial stroke test. PFD equation for 1oo1 voting without diagnostic test is similar to 1oo1D except diagnostic coverage is equal to 0. The equation corresponds IEC 61508 and ISA TR-96.05.02.

Valmet Flow Control Oy

Vanha Porvoontie 229, 01380 Vantaa, Finland.

Tel. +358 10 417 5000.

www.valmet.com/flowcontrol

Subject to change without prior notice.

Neles, Neles Easyflow, Jamesbury, Stonel, Valvcon and Flowrox, and certain other trademarks, are either registered trademarks or trademarks of Valmet Oyj or its subsidiaries in the United States and/or in other countries.

For more information www.neles.com/trademarks

